

# SECTION A

## RADIATOR and GRILLE 43-44000 SERIES

### CONTENTS

Division	Subject	Paragraph
I	TROUBLE DIAGNOSIS: (Not Applicable)	-
II	DESCRIPTION AND OPERATION: (Not Applicable)	-
III	ADJUSTMENTS AND MINOR SERVICE: (Not Applicable)	-
IV	REMOVAL AND INSTALLATION: Radiator Mounting .....	130-1
V	OVERHAUL AND MAJOR SERVICE: (Not Applicable)	-
VI	SPECIFICATIONS: (Not Applicable)	-


### DIVISION IV REMOVAL AND INSTALLATION

#### 130-1 RADIATOR MOUNTING

The radiator mounting is a four-point system using rubber inserts on "U" shaped brackets (for the lower mounting). The radiator upper mounting points are part of the upper radiator panel. The lower brackets mount on the lower portion of the radiator mounting panel.

#### INDEX OF ILLUSTRATIONS

Figure Number	Description
130-1 .....	43-44000 Standard, Air Conditioning and Heavy Duty Cooling; Radiator and Support Assembly
130-2 .....	43-44000 Radiator Overflow Reservoir and Tubes
130-3 .....	43-44000 Headlamps and Horns
130-4 .....	43-44000 Grille, Hood Bumper, Hood Latch and Support

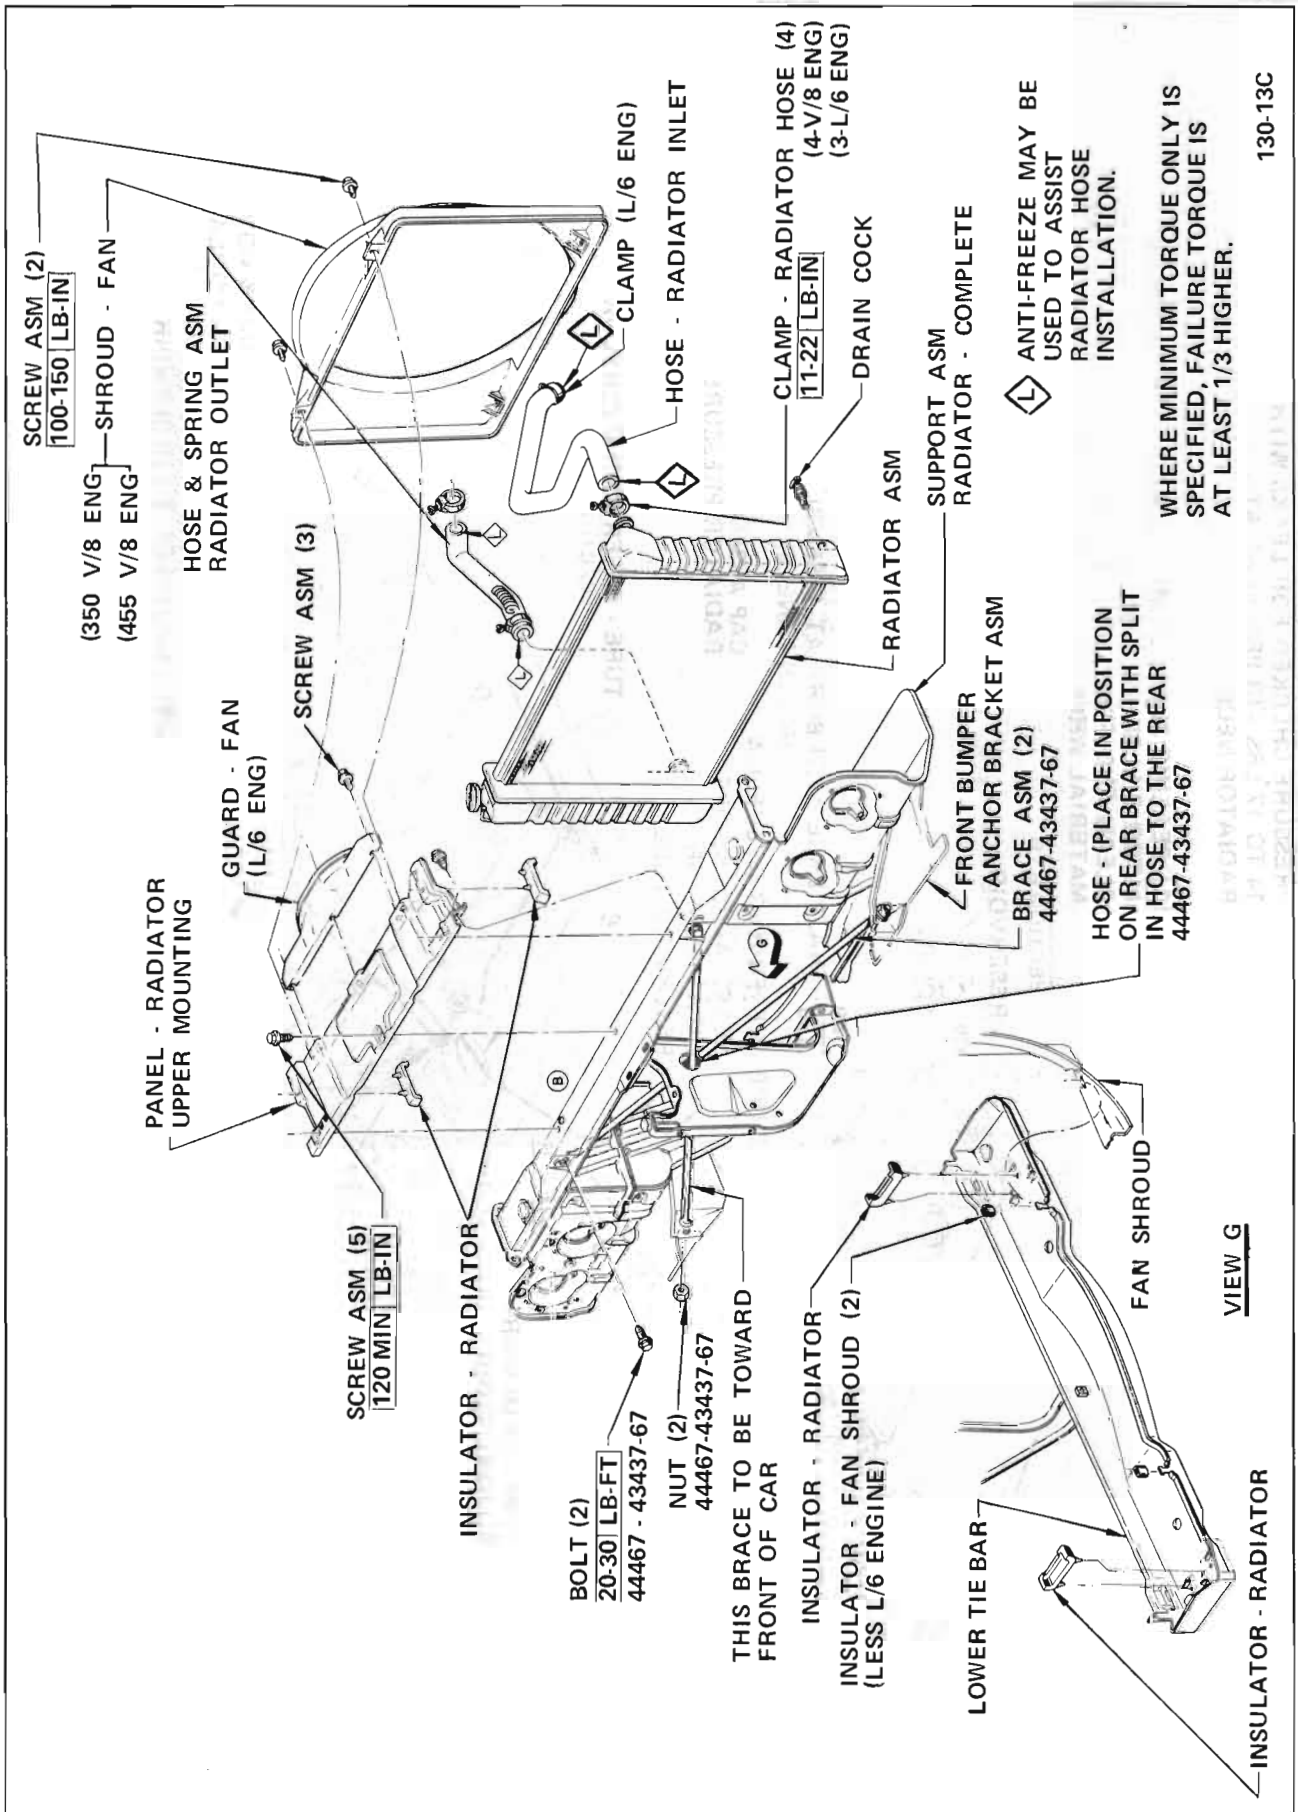


130-13C

Figure 130-1 - 43-44000 Standard, Air Conditioning and Heavy Duty Cooling, Radiator and Support Assembly

COOLING SYSTEM IS TO BE PRESSURE CHECKED FOR LEAKS WITH 14 TO 17 LBS AIR PRESSURE AT RADIATOR NECK

1 SEALING SURFACE INSIDE RADIATOR FILLER NECK MUST BE CLEAN AND FREE OF FOREIGN MATERIAL WHEN CAP IS INSTALLED

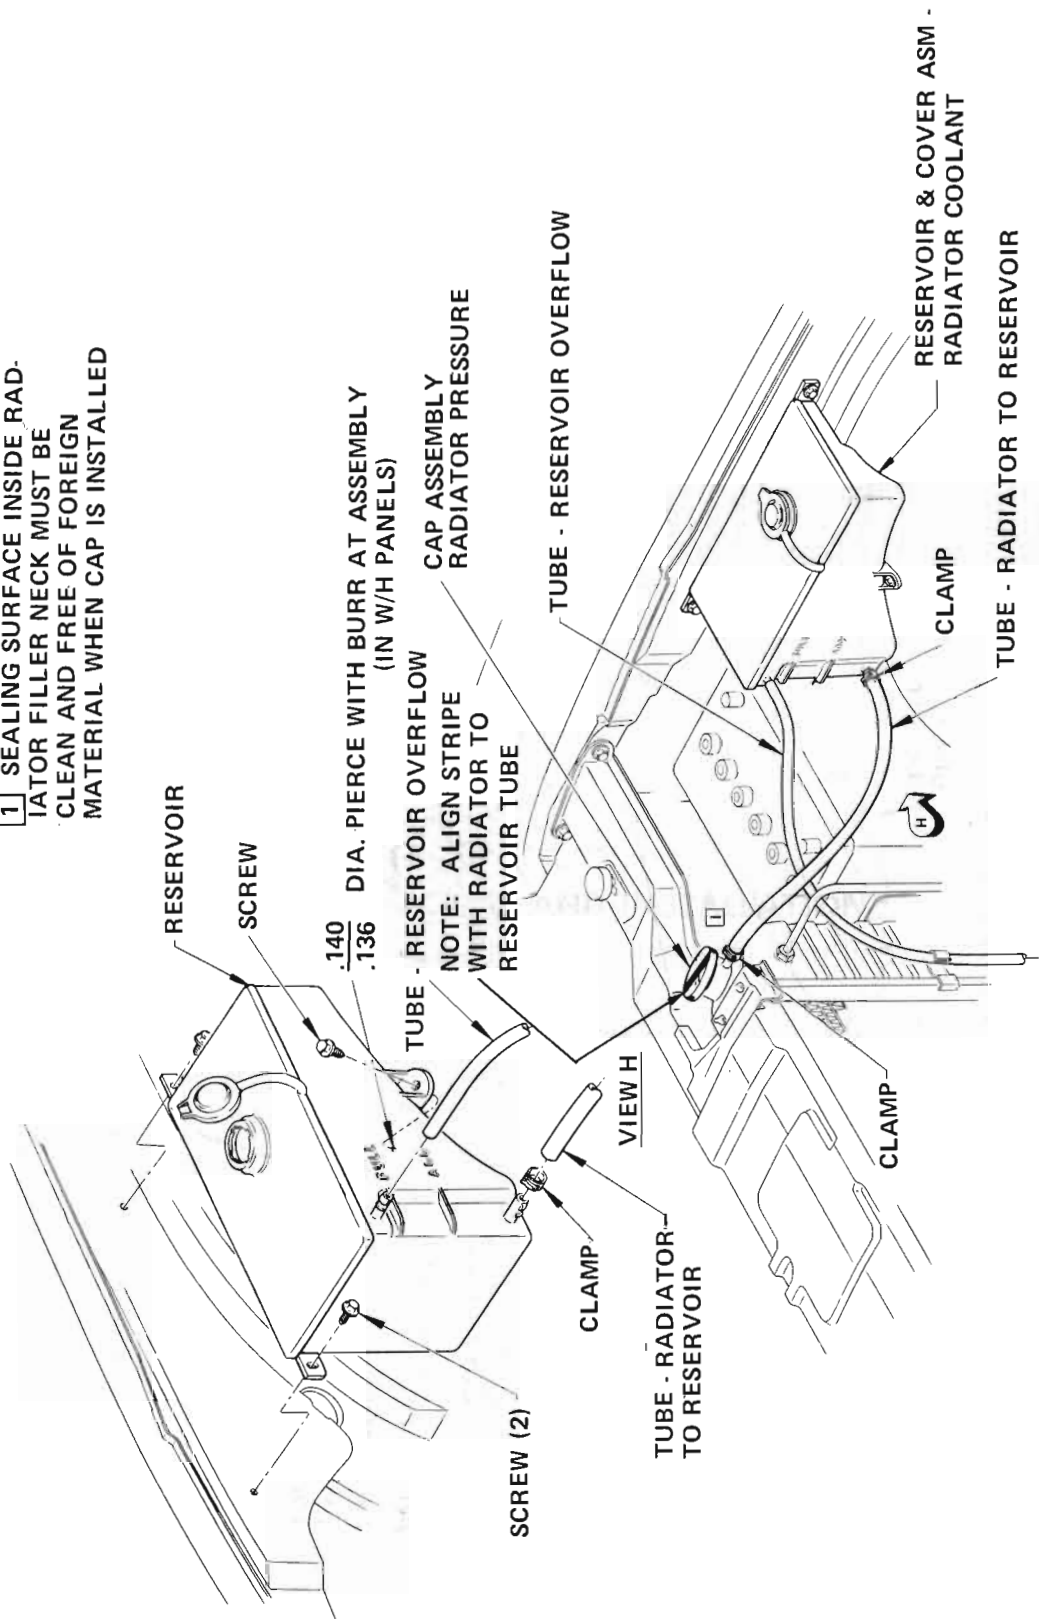

130-30A

Figure 130-2 - 43-44000 Radiator Overflow Reservoir and Tubes

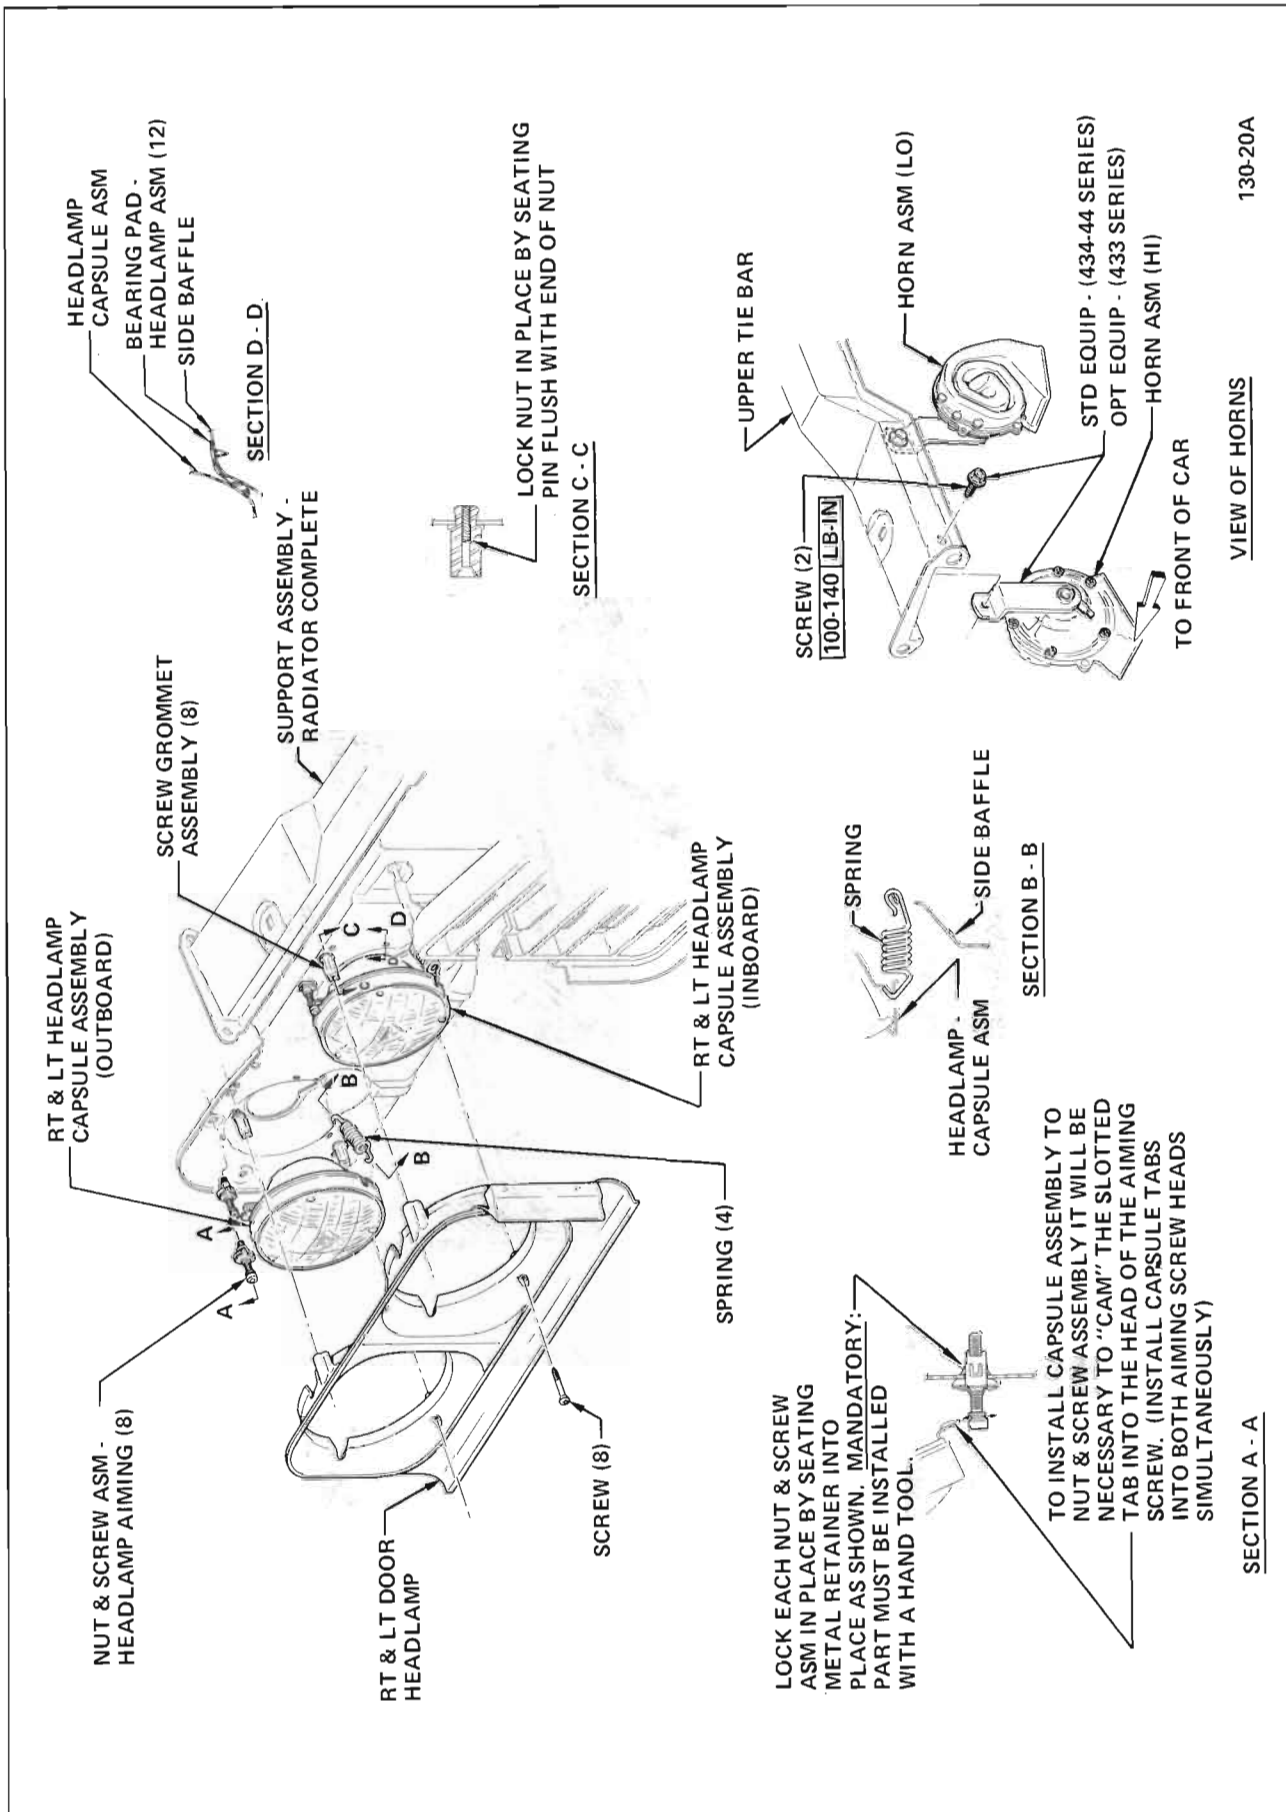


Figure 130-3 - 43-44000 Headlamps and Horns

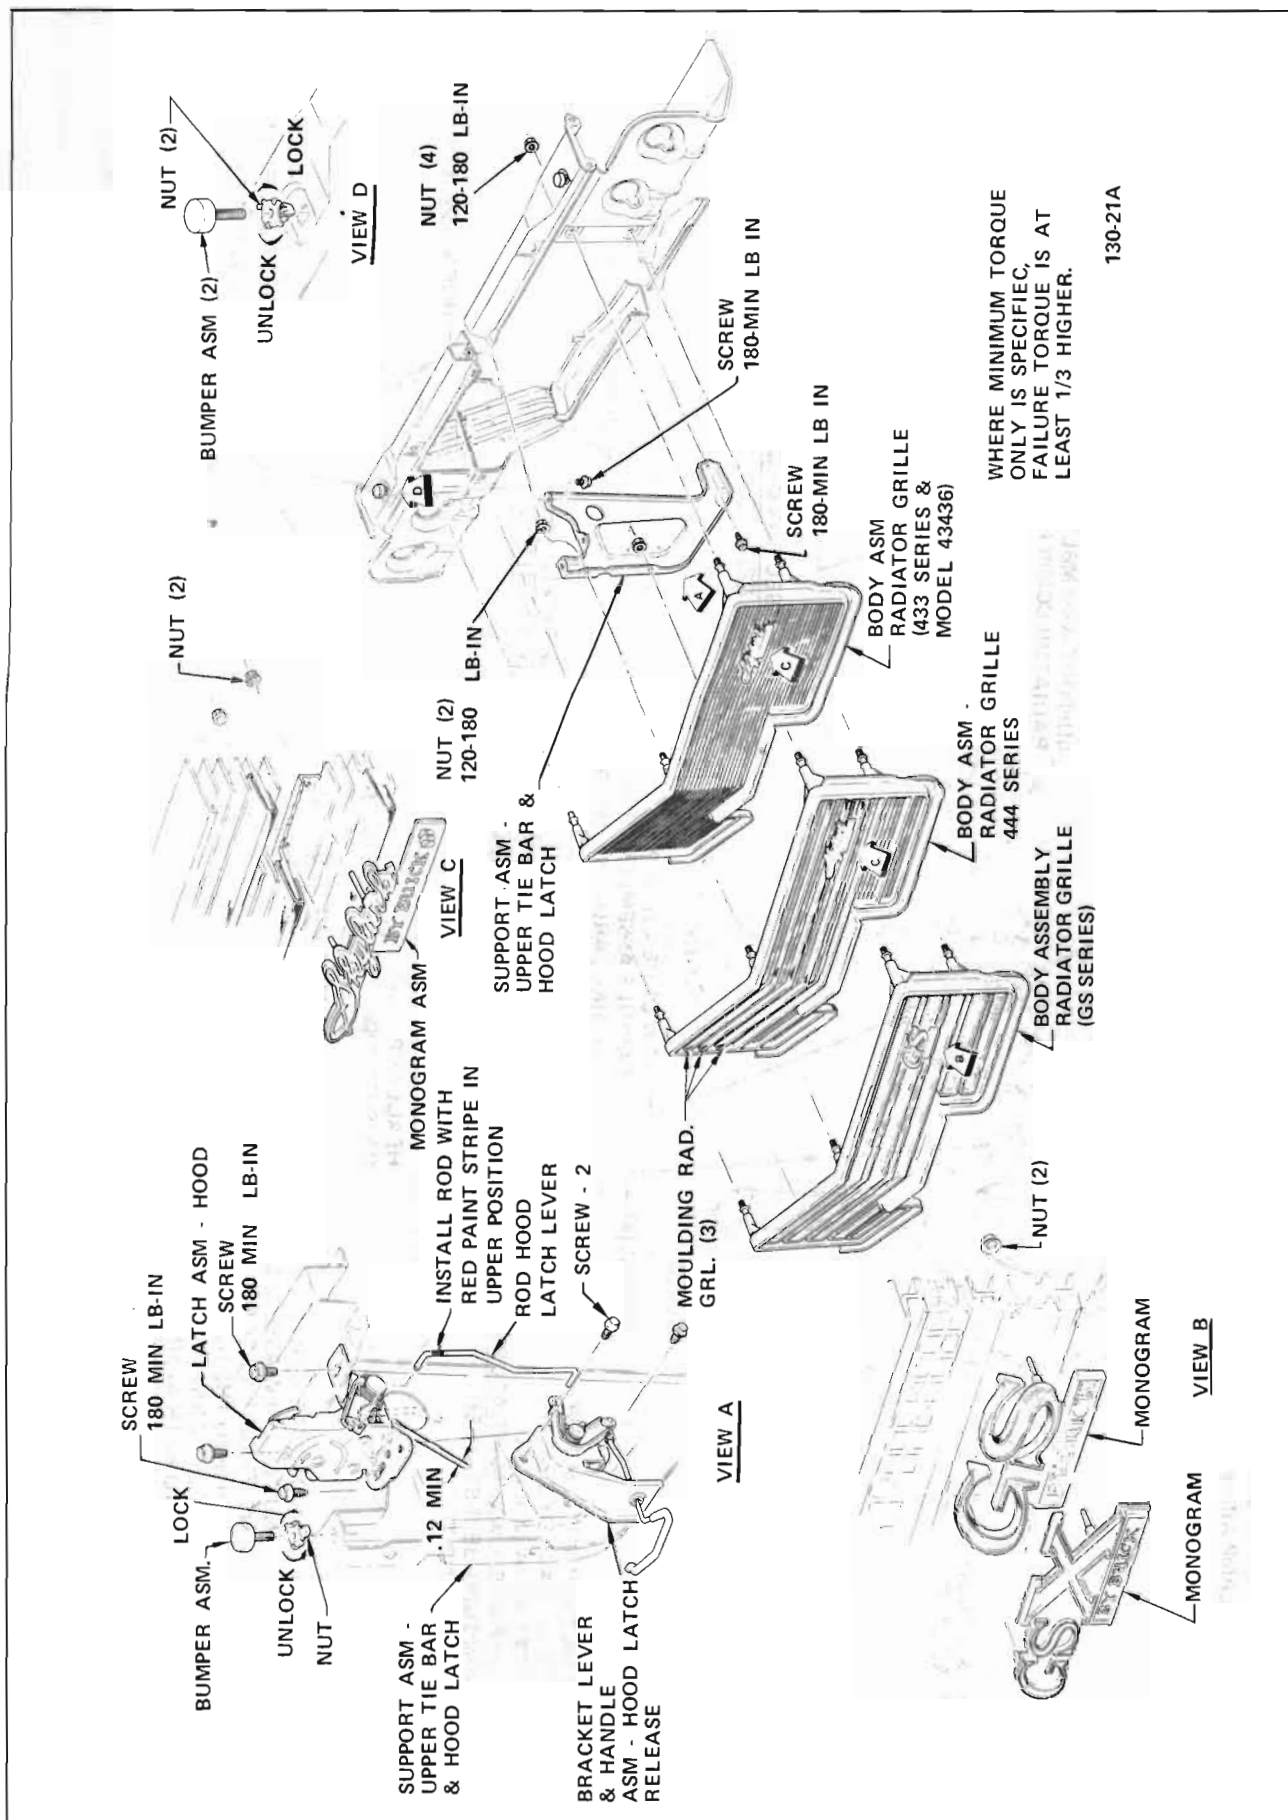


Figure 130-4 - 43-44000 Grille, Hood Bumper, Hood Latch and Support